



Wishbone
site furnishings

Technical Bulletin – Picnic Table Assembly
April 2009

Assembly Instructions for Wishbone “Rutherford” Picnic Table
(Typical for Other Wishbone Picnic Tables)

1. Gather the parts together.
 - 2 leg ends
 - 1 table support
 - 2 seat supports



2. Insert the leg and seat supports into the receiving extensions of the leg ends.



3. Put **LOCTITE®** Threadlocker super glue on 1-1/2" button head bolts and secure leg and seat supports. If supports have 2 holes, only one bolt is necessary. DO NOT OVER TIGHTEN. DO NOT CROSS THREAD.



4. Lay the plastic boards on the table with predrilled countersunk holes facing upwards and drop in tapered head bolts.



5. Put **LOCTITE®** Threadlocker super glue on the inside thread of the nuts.



6. Place spacers between the plastic boards to ensure they are evenly spaced.



7. Line up the ends of the boards of the table top and seat.



8. Secure nuts and washers to the bolts. **DO NOT OVER TIGHTEN.** The boards need to be able to expand and contract with changes in temperature.



9. Finished product.



Wishbone recommends that our picnic tables are affixed to a concrete pad or walkway. Ensure the concrete pad is at least 4" thick (rebar grid recommended to reduce likelihood of cracking). Width and length of concrete pad should extend far enough away from picnic table so that lawn cutting equipment will not come in contact with the table.



For technical support, contact Wishbone at 1-604-626-0476.

www.wishboneltd.com